

## Getting 4K Output from a Sony® a7S Mirrorless Camera

This document describes what is required to get 4K out of the Sony a7S through HDMI on the PIX-E monitors. Several things are necessary and should be completed in the following order:

- The camera must be set to movie mode.
- The HDMI cable must be plugged in from camera to monitor.
- The HDMI Output must be set appropriately.

### Setting Camera to Movie Mode

**To set the Sony a7S to Movie mode:**

- ▶ Turn the top dial to the Movie icon. (This icon looks like a film frame with sprocket holes.)

### Setting up HDMI Recording Output

Plug in the HDMI cable (Type D to Type A) from the camera to the PIX-E monitor before setting up the output. Otherwise, the menu setting for the following procedure will be disabled (gray).

**To set up HDMI recording output:**

1. Turn the camera on.
2. Press the MENU button on the camera.
3. Select the tab with the toolbox icon (located farthest right).
4. Select 3.
5. Select HDMI 4K Output.
6. Set output to either 24p or 30p.

